




Cabina SQUARE

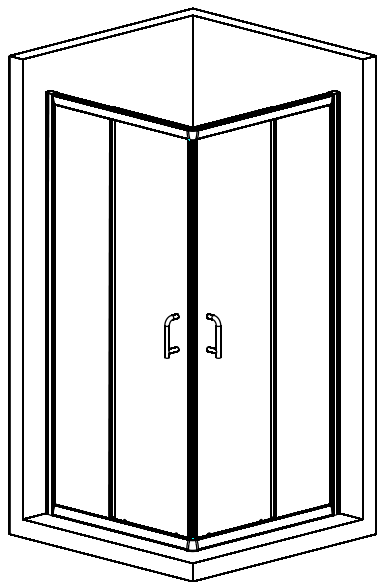


Tools:




No.	Description	QTY
1	Moved glass	2pcs
2	Fixed glass	2pcs
3	Top & bottom track profile	4pcs
4	Wall profile	2pcs
5	Extension profile	2pcs
6	Cap of side profile	4pcs
7	Cap of top profile	2pcs
8	Gasket	4pcs
9	"F" waterproof strip	4pcs
10	Sealing strip	2pcs
11	90° magnetic strip	2pcs
12	Wall plug	6pcs
13	Screw cap	6pcs
14	Track profile connector	2pcs
15	Handle	2pcs
16	ST 4×30 Truss head screw	6pcs
17	ST 4×20 Round head screw	8pcs
18	ST 4×10 Round head screw	6pcs

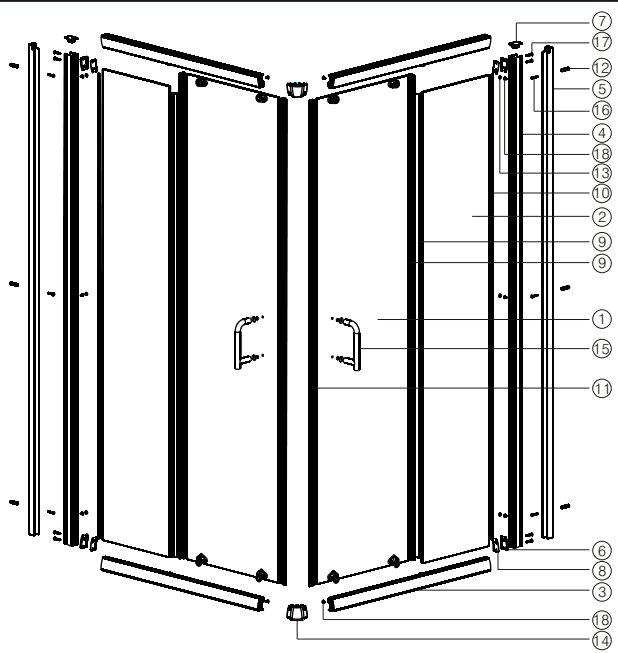



2


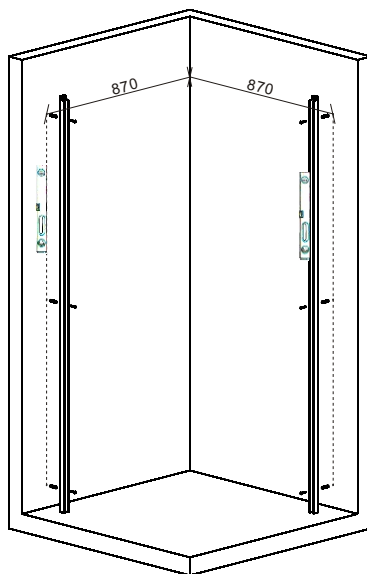


1



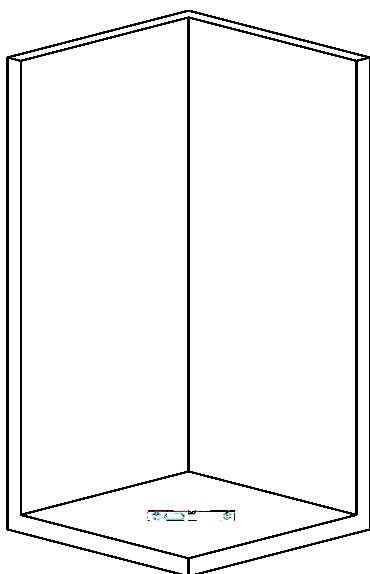


3

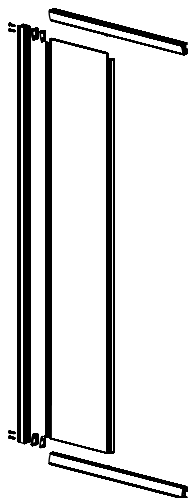
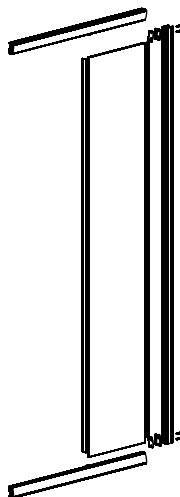


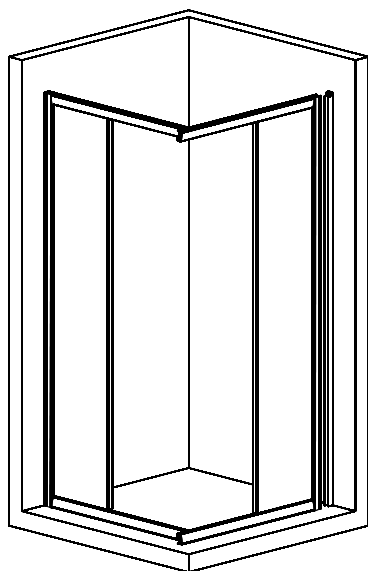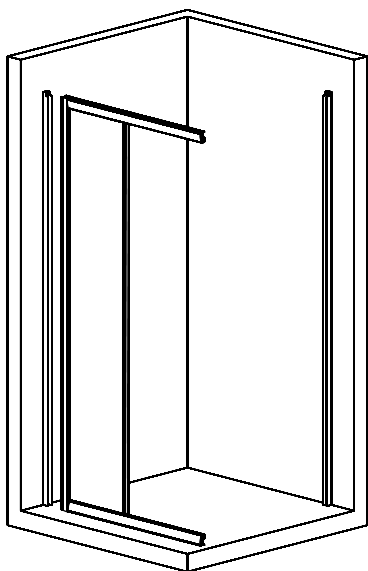


4

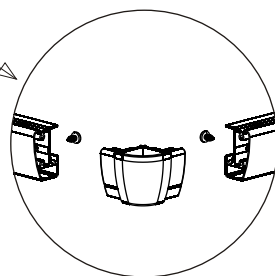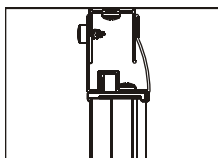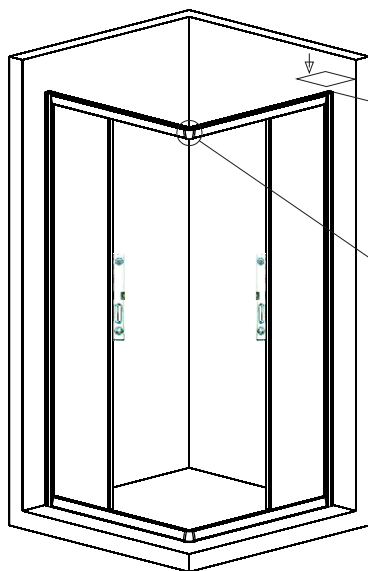

5

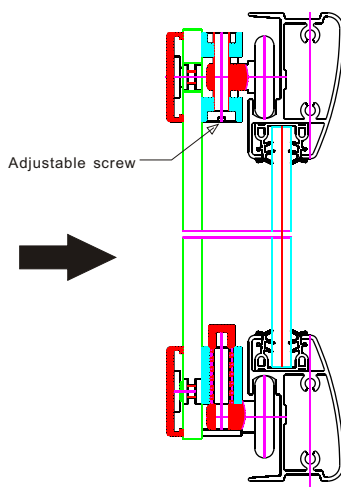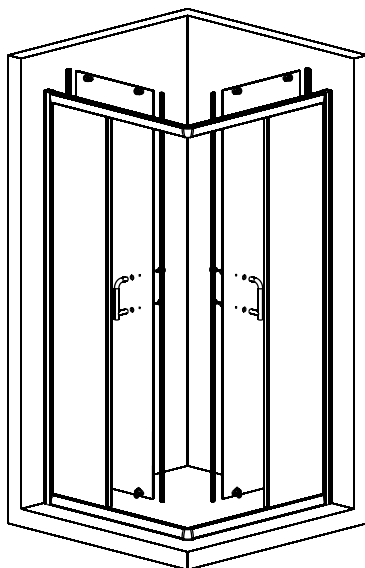

6

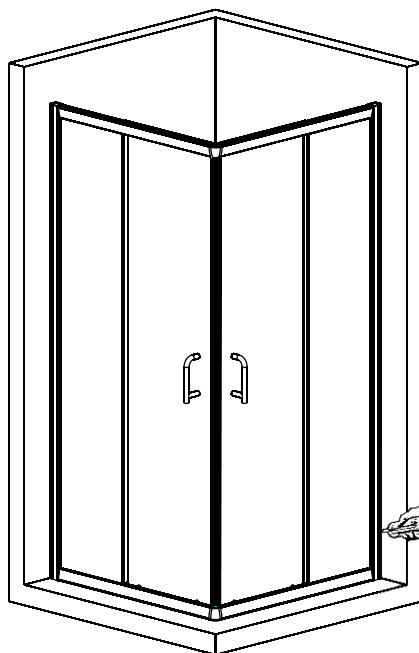

7

Tips:
Allow the silicone to fully
dry before operating the
door suggest after 24 hours.